



• This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# SAFETY INFORMATION

## NOTICE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver. connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This Class B digital apparatus complies with Canadian ICES-003.

# INSTALLATION INSTRUCTIONS

1. Remove all four lens retaining screws (C) and set aside for later use.

equipment generates, uses and can radiate radio frequency energy and, if not installed and

- Connect the equipment into an outlet on a circuit different from that to which the receiver is



## INSTALLATION INSTRUCTIONS

 Separate lens (B) from fixture plate (A) by gently pulling the lens. Disconnect wire connectors from both ends of the fixture, then set lens (B) aside for later use.

3. Line up the outlet box on mounting surface over the intended knockout on the fixture plate (A), align the fixture plate (A) so that the outlet box is completely covered. While holding the fixture in the intended installation position, mark the location of the mounting holes on the mounting surface. Set the fixture aside.

B. DRYWALL MOUNTING: If the mounting holes go through drywall without a stud, drill four small pilot holes using a 1/8-in. drill bit (not included), and install drywall anchors (BB) into the holes with a hammer (not included).

**CEILING STUD MOUNTING:** If the mounting holes go through ceiling studs, drill four small pilot holes using a 5/32-in. drill bit (not included) for the wood screws (AA). **NOTE:** Do not install wood screws (AA) yet

Drywall	Wall Stud
	1
	 Pilot hole
Drywall Mounting	Wall Stud Mounting
FIG	g. 4

B

X

×

Α

Disconnect wire connectors

Fig. 2

۰ <u>(</u>) م

Fig. 3

Outlet box

Х

## INSTALLATION INSTRUCTIONS

 Ensure that power is shut off. Feed the supply wires from outlet box through the knockout on fixture plate (A). Align the mounting holes on the fixture plate (A) to the holes drilled on the mounting surface and secure each with a wood screw (AA).

6. Connect the supply wires to the fixture wires -- black to black, white to white, and green to copper/bare; secure each with a wire nut (AA).
WARNING: If there is no ground supply wire, stop installation and consult a qualified electrician.

 Re-connect the wire connectors between the fixture plate (A) and lens (B)



4



#### INSTALLATION INSTRUCTIONS

8. Replace the lens (B) over fixture plate (A) and secure with original 4 screws.



### **OPERATING INSTRUCTIONS**

9. The indicator light pull chain switch will toggle the indicator light on and off.

The main light pull chain switch will operate the two banks of light which will sequentially switch in the following configurations:

Off → Uplight On → Downlight On → Both Downlight and Uplight On



#### CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaner and soft cloth. Do NOT use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure the power is turned off, and any liquid spray should be applied to the cleaning cloth and not sprayed directly onto the fixture itself.

### TROUBLESHOOTING

Pro	blem	Possible Solution	Corrective Action
Fixture do	oes not light.	<ol> <li>Power is off.</li> <li>Incorrect wire connection.</li> <li>Defective wall switch.</li> </ol>	<ol> <li>Check circuit breaker or wall switch.</li> <li>Check wire splices.</li> <li>Replace switch.</li> </ol>
	eaker trips t is turned on.	Crossed wires or power wire is grounded out.	Verify wires are correctly connected.

### WARRANTY

This fixture is warranted to be free from defects in workmanship and material for up to 5 years. Based on reasonable household usage, when used in accordance with package and fixtures directions. If this fixture does not last for the time period guaranteed (based on up to 3 hours average usage per day/7 days a week), the manufacturer will send you a replacement fixture upon receipt of the returned fixture, register receipt, and proof of purchase. To contact us, go to www.sunlite.com and email us to find out how to return the fixture. Sunlite is committed to making high quality products. Returning the fixture will help us monitor and further improve product quality. This replacement is the sole remedy available, and LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states do not allow exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.