

COLOR SELECTABLE SWITCH

LED ECO MINI WALL PACK

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING: Avoid fire or electric shock. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. Before installing the fixture, ensure that all parts are present and same as the part list. If any part is missing or damaged, do not attempt to assemble, install, or operate this fixture. To prevent product malfunction and / or electrical shock this product must be properly grounded. Min 75°C supply conductors. Suitable for wet location. Suitable for operation in ambient not exceeding 45°C, Use UL approved wet location junction boxes and conduit.

CAUTION: Turn off the power at fuse or circuit breaker box before installation and maintenance to avoid electric shock. This fixture requires a 120-Volt AC power source. Use caution when handling this product during or after operation as it may become hot and cause burns. Disconnect product and allow cooling prior to servicing. Any alteration or modification of this product is expressly forbibbden as it may cause serious personal injury, death, property damage and/or product malfunction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful inference, and (2) this device must accept any inference received, including that may cause undesired operation.

Retain these instructions for future maintenance reference.



 
HARDWARE INCLUDED:



One (1) EVA Gasket



Three (3) Terminals



TOOLS REQUIRED:





Installation


TURN OFF POWER AT FUSE BOX PRIOR TO INSTALLING:


- 1. Use a screwdriver to loosen 4 screws on front. Remove the lamp shade. (Fig. 1)
- 2. Drill through the appropriate mounting hole for mounting to a surface wall mount. (Fig. 2)
- 3. Use a screwdriver to remove plug. (Fig. 3)
- 4. Attach the self-adhesive EVA gasket to the back of the housing to cover the junction box or mounting hole. (Fig. 4)
- 5. Pull building wires through open hole. Align and mount the fixture to the wall surface. Wiring per wiring diagram. **IMPORTANT:** To weather-proof your outdoor installation, be sure to seal all mounting points, wire inlets, and penetrations (Conduit, Plugs, etc.) with silicone sealant. (Fig. 5)
- 6. Make wiring connection and ensure the are secure. Select desired CCT by toggling CCT switch. (Fig. 6)
- 7. Secure the fixture by 4 screws, block up the two holes with rubber plugs. (Fig. 7)
- 8. Use a clear silicone caulk around the outside of the fixture base to provide a water-tight seal when fixture is installed. (Fig. 8)


TURN POWER BACK ON AND ENSURE FIXTURE IS WORKING PROPERLY.

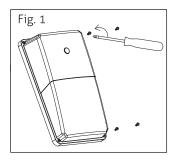

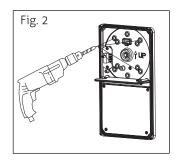


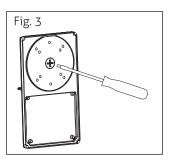


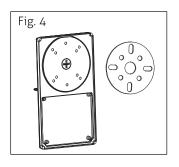

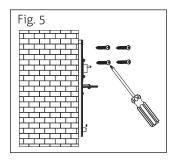



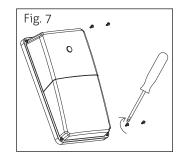

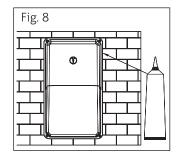




CCT SETTING


This fixture allows the correlated color temperature (CCT) of the LEDs to be adjusted from warm white (3000K) to cool white (5000K) as desired. CCT Selectable switch is located inside of the fixture. Before closing up the fixture, the CCT switch should be set to the desired positions by moving the toggle switch through the range of detents or clicks and following the position markings next to each switch.

Note: To avoid electric shock or component damage, do not use the CCT switch after power-on.

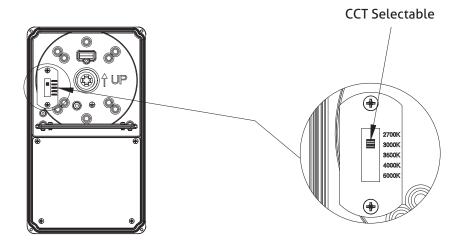

PHOTOCELL SETTING

Connect or disconnect the plug to control the opening or closing of the photocell.

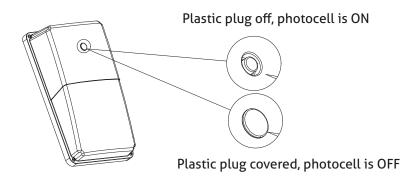

Care and maintenance – Use dry and clean cloth to wipe the surface of the fixture **Replacement-** This LED product has no bulb to replace.