

120VAC/60Hz Intertek

WALL CANOPY ANTIQUE BRASS FIXTURE | 07036-SU

Please read and understand this entire manual before attempting to assemble, operate or install the product.

A

WARNINGS & CAUTIONS: Risk of fire or electric shock. Turn off the power at fuse or circuit breaker box before installation and maintenance to avoid electric shock. Before installation thoroughly review enclosed installation manual. Use for 120 Volt fused circuits, ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODE (N.E.C) STANDARDS. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician. All fixtures should be mounted to a grounded junction box. Do not attempt to open the fixture housing. There are no serviceable parts inside. Do not use near or around flammable/combustible materials or liquids. Connecting to a different power source may create a hazard and will void the warranty. Suitable for Dry location only. Wall mount only.


**AVERTISSEMENT** – Risque d'incendie ou de choc électrique. Ce produit doit etre installé selon le code d'installation pertinent, par une personne qui connait bien le produit et son fonctionnement ainsi que les risques inherents. Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats. Convient aux emplacements humides. Les fils d'alimentation 90°c min. POUR EMPLACEMENTS SECS SEULEMENT, INSTALLATION MURALE SEULEMENT.

Retain these instructions for future reference.

v2022

## Installation & Assembly

Remove the fixture and hardware from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

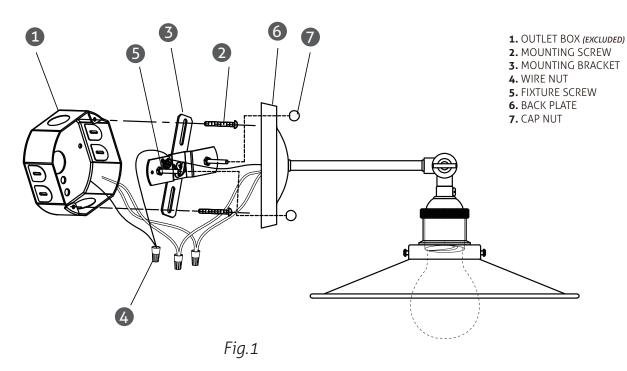

- 1. Screw in the FIXTURE SCREWS (5) to the MOUNTING BRACKET (3).
- 2. Pull the power supply wires out from the OUTLET BOX (1) and mount the MOUNTING BRACKET (3) to the OUTLET BOX (1), Using MOUNTING SCREWS (2).
- 3. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK, WHITE to WHITE, Attach the POWER SUPPLY GROUND WIRE from the OUTLET BOX and the FIXTURE GROUND WIRE by using WIRE NUTS (4).
- 4. After wires are connected, tuck them carefully inside the outlet box.
- 5. Place BACK PLATE (6) over the OUTLET BOX, and make sure FIXTURE SCREWS (5) feed through the two holes on the canopy. Thread two CAP NUTS (7) onto the FIXTURE SCREWS (5), tighten them until BACK PLATE (6) is securely mounted.
- 6. After installing the fixture, restore power at the circuit breaker and turn light switch on to activate this fixture. (Max 60w bulb)

Care and maintenance – Use dry and clean cloth to wipe the surface of the fixture