

INSTALLATION INSTRUCTIONS

LED WALL OUTDOOR FIXTURE

100-277V /60Hz Input, NO Dimmable

READ AND FOLLOW SAFETY INFORMATION

CAUTION - Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock. All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

INSTALLATION & ASSEMBLY

1. Attach the MOUNTING BRACKET (2) with the #8-32 MOUNTING SCREWS (3) to the OUTLET BOX (1). Install the NIPPLE (4) and HEX NUTS (5), but, do not tighten the HEX NUTS (5) at this time.
2. Place the HOUSING (13) over the OUTLET BOX (1) and onto the NIPPLE (4), and adjust the NIPPLE (4) by tightening inward or out from the mounting bracket, until it protrudes out from the plastic HOUSING (13) by a 1/4". Remove Housing and tighten the HEX NUTS (5) securely.
3. Pull the power supply wires out from the OUTLET BOX (1). Attach the BLACK SUPPLY WIRE (7) to the BLACK FIXTURE WIRE (10) and the WHITE SUPPLY WIRE (6) to the WHITE FIXTURE WIRE (11) using WIRE NUTS (9). Connect the FIXTURE GROUND WIRE(12) to the POWER SUPPLY GROUND WIRE(8) using a WIRE NUT(9) (not included). Tuck wires into OUTLET BOX (1).
4. Place HOUSING (13) onto NIPPLE (4) and secure with the CAP NUT (14). Choose needed color temperature by adjusting the switch position(17).
5. Install the LENS(15) into the FIXTURE BODY (13) by threading, and secure using the SCREW (16).
6. After installing the fixture, caulk upper 2/3 of wire connection enclosure to mounting surface. Leave bottom 1/3 un-caulked for drainage of any water that might leak into the enclosure. The manufacturer recommends a non-drying exterior caulking material. A good example is a clear silicone rubber sealant for exterior use.

