

**INSTALLATIONS INSTRUCTIONS FOR MOUNTING THE 85333-SU TRUNNION KIT TO THE 75W, 85322-SU; 150W, 85323-SU; 200W, 85324-SU; AND 300W, 85325-SU STREET LIGHT FIXTURES.**


Remove metal plate to get access to driver and mounting bolts. Use a tamper-proof Torx head screw driver to remove the (8) screws. Save and re-use the screws later.



To remove the split fitter and install the trunnion, the driver needs to be moved out of the way.



Remove first screw holding down the driver.

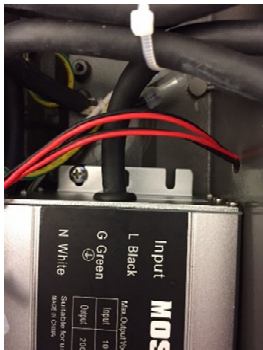

Remove the second screw holding down the driver on the other end. Keep both screws to re-install the driver back in place later.



Carefully relocate the driver and wires to get access to the (2) hex bolts.




Carefully pull the driver power leads out of the split fitting.



Undo the two bolts and remove the slip fitting. Install the trunnion bracket as shown and reuse the two bolts and/or rubber washer, but use two hex nuts provided in the kit hardware bag.



Re-run the power leads through the threaded hole for indoor dry location applications or use the short length of power supply cable and water-tight strain relief provided in the trunnion kit for outdoor wet location applications.

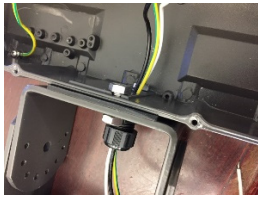

Re-install the driver back into place making sure not to pinch any wires and re-install the metal plate using the (8) tamper-proof Torx head screws from earlier.



The assembly and installation is now complete. Mount the trunnion and light to a flat surface with the proper means to support the weight of the entire fixture and trunnion assembly. (Note that the hardware for mounting the fixture to a support is not provided).

